

TUNING GUIDE UFO22



	0-10 KN	11-15 KN	16-20 KN	21-25 KN
GIRI ALTE	/	+4	+4	+4
TENSIONE ALTE	27	32	34	35
GIRI BASSE	/	+2	+2	+2
TENSIONE BASSE	18	23	27	33